


WEEDit – Boom Parking, Quick Start Guide v2 (new switchbox)

TO OPEN THE WEEDit BOOM, ready to spray >>> Ideally perform all folding operations on flat ground


1. Hold the **LATCH ARMS** switch **DOWN** to set the latches to the Lock position. Check the locking rams are retracted.



2. Fully extended both stay arms. Hold the **FOLD ARM** switch to the **DOWN** position until both sides are fully extended.





3. Set the **BOOM STEER WHEELS** switch to **PART FOLD**, this will only allow the boom wheels to rotate ½ of their travel.

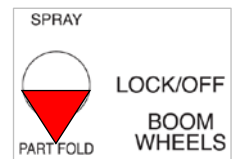


4. Drive forwards slowly below 5 KM/H. While moving forward, hold both the **LH WHEEL** & **RH WHEEL** switches **DOWN**, this will allow the booms to move approximately out half way

- It will take approximately take 10 ~ 30 metres of travel to accomplish this, depending on the soil conditions.
- Set the **BOOM WHEELS** switch back to the **LOCK**
-

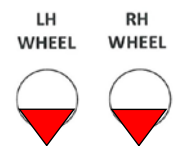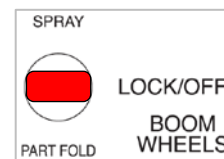

Rotate the main wheels back to the original position, so they are in-line with the boom. Hold both the **LH WHEEL** & **RH WHEEL** switches to the **UP** position until done.

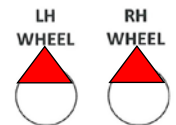


5. Reverse slowly until the booms arms have opened all the way and the fold arms have **latched into the locks**.


- If one side latches before the other side use the wheel switch to rotate the wheel to the field position to prevent the wheels from bulldozing.
- It will take around 10 metres of travel to accomplish this, depending on the soil conditions.
- **Double check** that both stay arms are docked & locked.



6. Rotate both of the main wheels outwards 90 degrees, to now point in the direction of travel. Hold both the **LH WHEEL** & **RH WHEEL** switches to the **DOWN** position, and at the same time slowly move forwards until done (a few seconds).

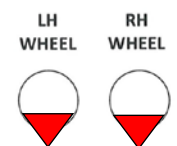



7. **Spray mode:** Set the **BOOM WHEELS** switch to **SPRAY** position. This will allow the boom wheels to float when turning. Go spraying.

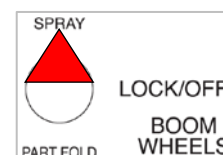


TO FOLD THE WEEDit BOOM >>> Ideally perform all folding operations on flat ground


- 1. Lock the wheels** (facing direction of travel). Set the **BOOM WHEEL** switch to **LOCK**


- 2. Unlock the arms.** Move the **LATCH ARMS** switch **UP**




to UNLOCK
- 3. Drive forwards slowly below 5 KM/H.** While moving forward, hold both the **LH WHEEL** & **RH WHEEL** switches **UP**, this will move the wheels into the transport position (in line with the boom). Travel forwards slowly until both booms are in the folded position.

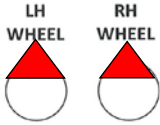

- 4. Fold in both stay arms.** Hold the **FOLD ARM** switch to the retracted. Only fold the arms in when the booms are fully folded together.



IN position until both sides are fully folded together.
- 5. Set up the machine for safe transport.** Fit the boom transport chain and arm locking device.



Remain in "Lock".

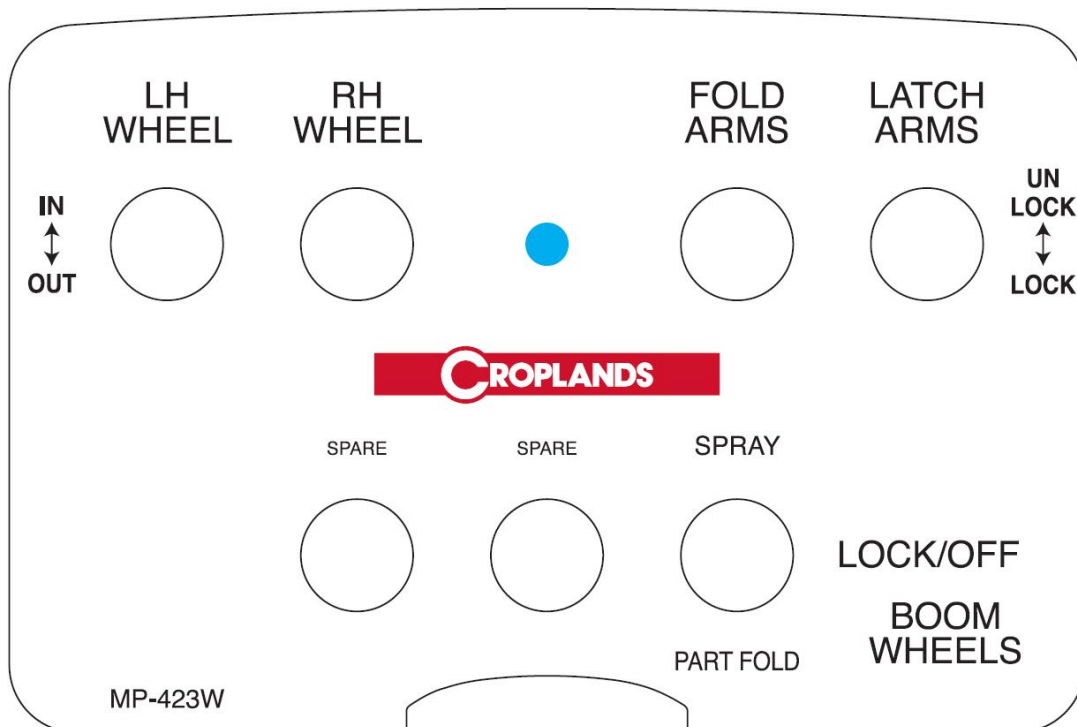

NOTE: It is vital that the correct parking procedures are followed. Failure to follow these guidelines may result in damage to the sprayer.

Ideally perform all folding operations on flat ground.